



Ultra-High Pressure Pump Winterization Procedure


If you have any questions or concerns please call:
920-779-9913

- 1 Turn tank to pump valve handle to the "**WINTERIZE**" position.


"**WINTERIZE**" Position

Flow Indicator Marking
on valve handle

Normal UHP Pump Mode Position

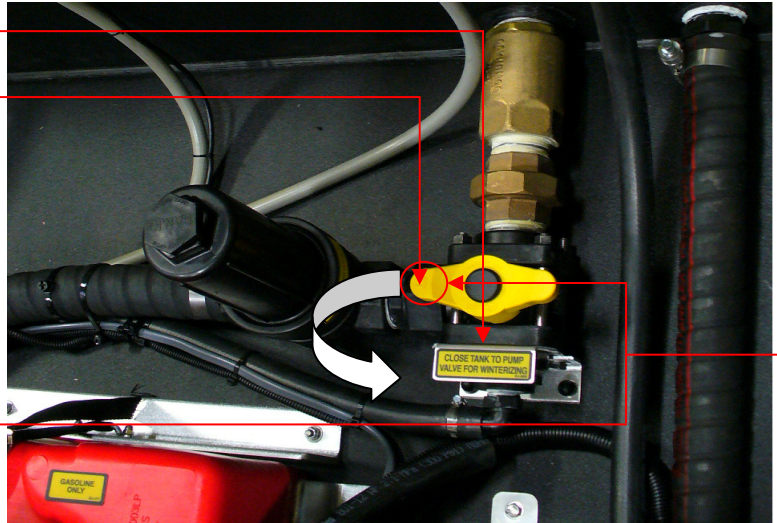

- 2 Attach provided hose section to "**WINTERIZE**" port fitting on pump control panel .

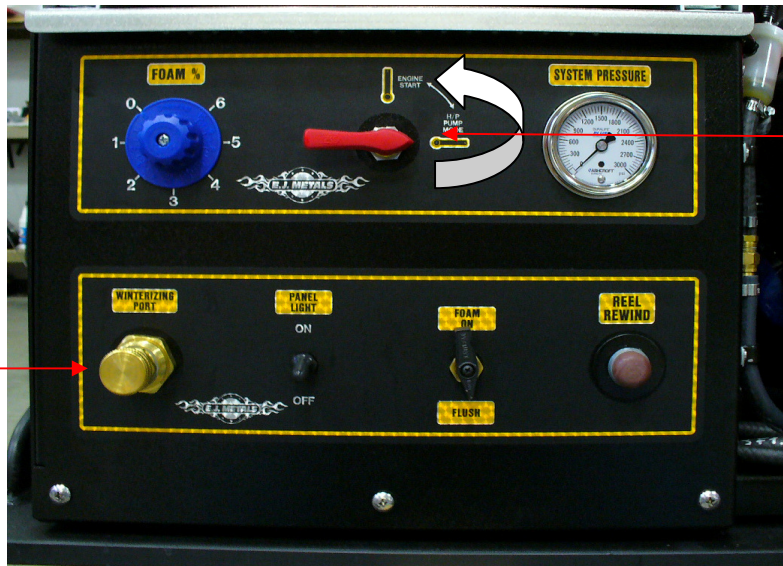

- 3 Insert winterizing pick-up hose into container with 2-gallons of "**PINK RV ANTI-FREEZE**".
- 4 Turn "**RED**" handled ball valve (Engine Start / HP Pump Mode), to: "**ENGINE START**" position.
- 5 Start pump engine and idle at slow RPM.
- 6 Turn "**RED**" handled ball valve (Engine Start / H/P Pump Mode), to: "**UHP PUMP MODE**" position.
- 7 Pay-out enough hose from reel for safe operation / nozzle discharge.
- 8 Point nozzle in safe direction, squeeze trigger on nozzle and spray until discharged solution flows "**PINK**".
- 9 Re-lease trigger on nozzle.
- 10 Shut down pump engine.
- 11 Point nozzle in safe direction, discharge residual pressure from hose / nozzle.
- 12 Re-wind hose back on reel and store nozzle.
- 13 Turn tank to pump valve handle back to the "**PUMPING**" position.
- 14 Turn "**RED**" handled ball valve (Engine Start / HP Pump Mode), back to the: "**ENGINE START**" position.
- 15 The pump, hose and nozzle assembly is now "**WINTERIZED**" and ready for the next firefighting operation.